
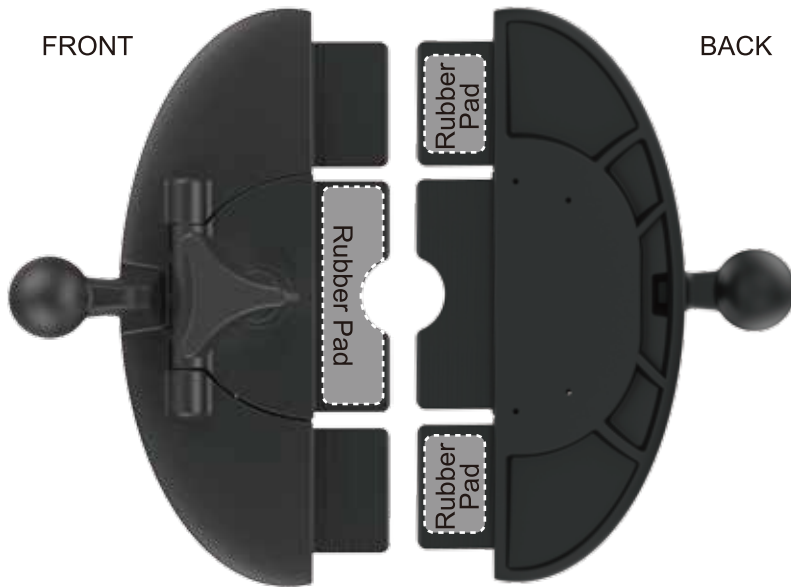


MOUNT

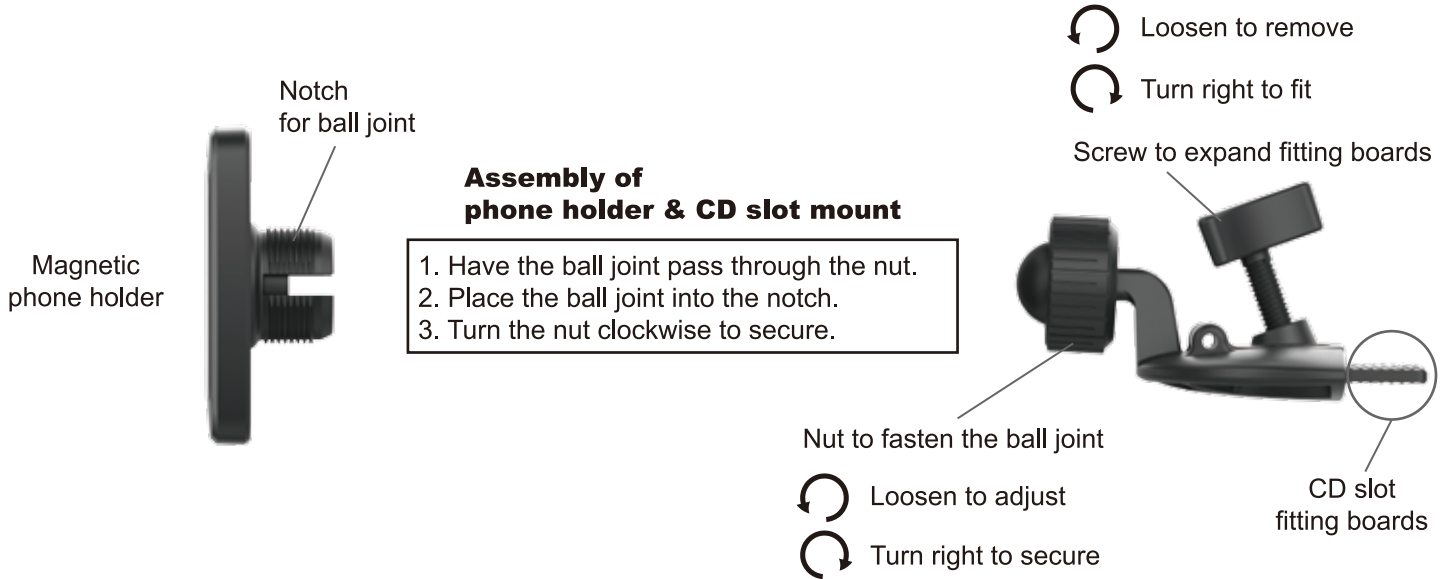

Rubber Pads with 3M adhesive tape

You can stick the included rubber pads onto CD slot fitting boards for larger CD slot or better grip.

Mount Installation

- Place fitting boards into CD slot.
- Turn the fitting screw clockwise to expand fitting boards for securing in the CD slot.

*DO NOT over-expand the fitting boards as it may damage the CD slot.


Attach your phone onto the magnetic phone holder


Hover your phone near the magnetic phone holder to instantly lock your device securely in place.



NOTE :

The mount can also be installed upside-down for your need. (ex. not to block your air vent)

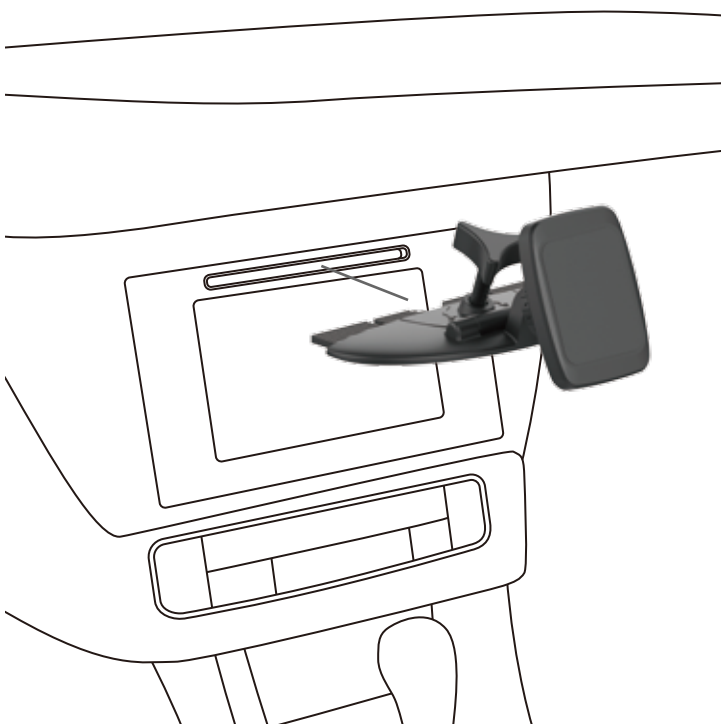

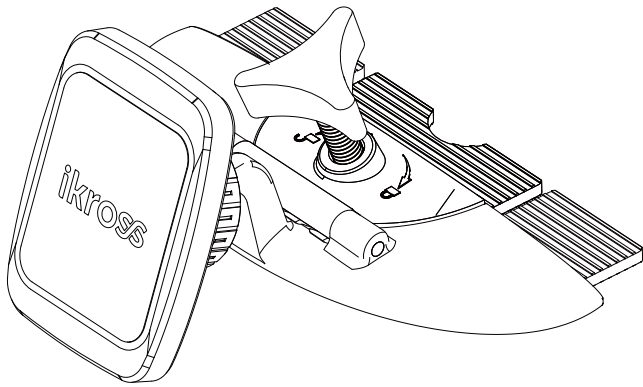

ikross

ikross

Car CD Slot Mount
Magnetic Holder for Smartphone

USER'S MANUAL IKHD80

MAGNETIC HOLDER & METAL PLATE

Metal plate kits



Metal plate
with 3M adhesive tape x 2

Transparent protection film x 2


Metal Plate Installation

- A - Stick on the phone or its protection case
1. Peel off the protection film and stick it onto your phone.
 2. Peel off the release liner of 3M adhesive tape on metal plate and stick the metal plate onto the protection film.



* If the protection film can not be stuck onto your protection case firmly, please use the metal plate directly.

- B - Between phone & its slim protection case
1. Peel off the release liner of 3M adhesive tape on metal plate and stick the metal plate onto inside of the protection case.
 2. You can also try not to peel off the release liner, just put the metal plate between phone & its protection case.

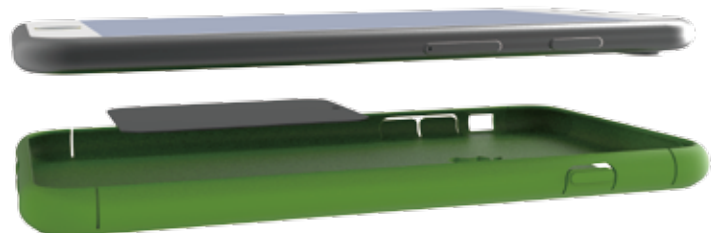

* DO NOT place the metal plate between your phone & protection case, if you use a thick protection case.